


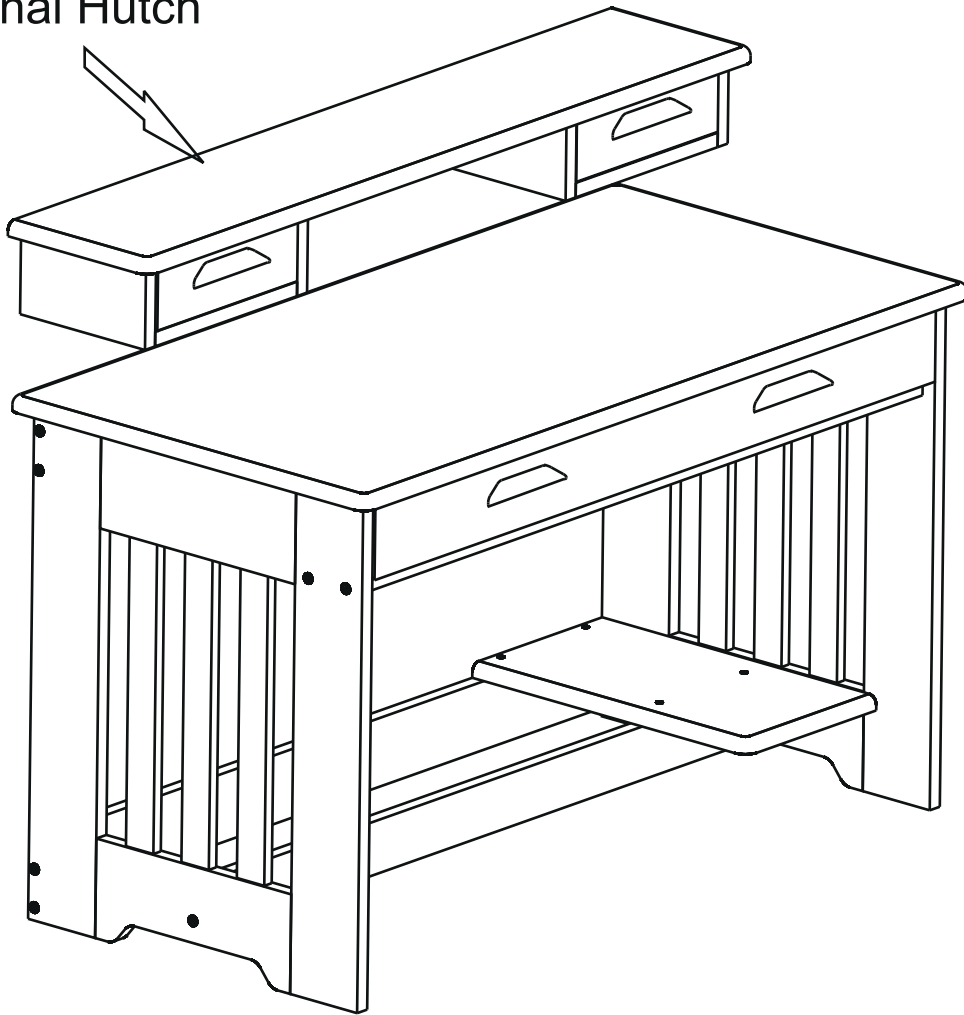

Desk


2167-2867-0267-2967








Optional Hutch






WWW.Discoveryworldfurniture.com

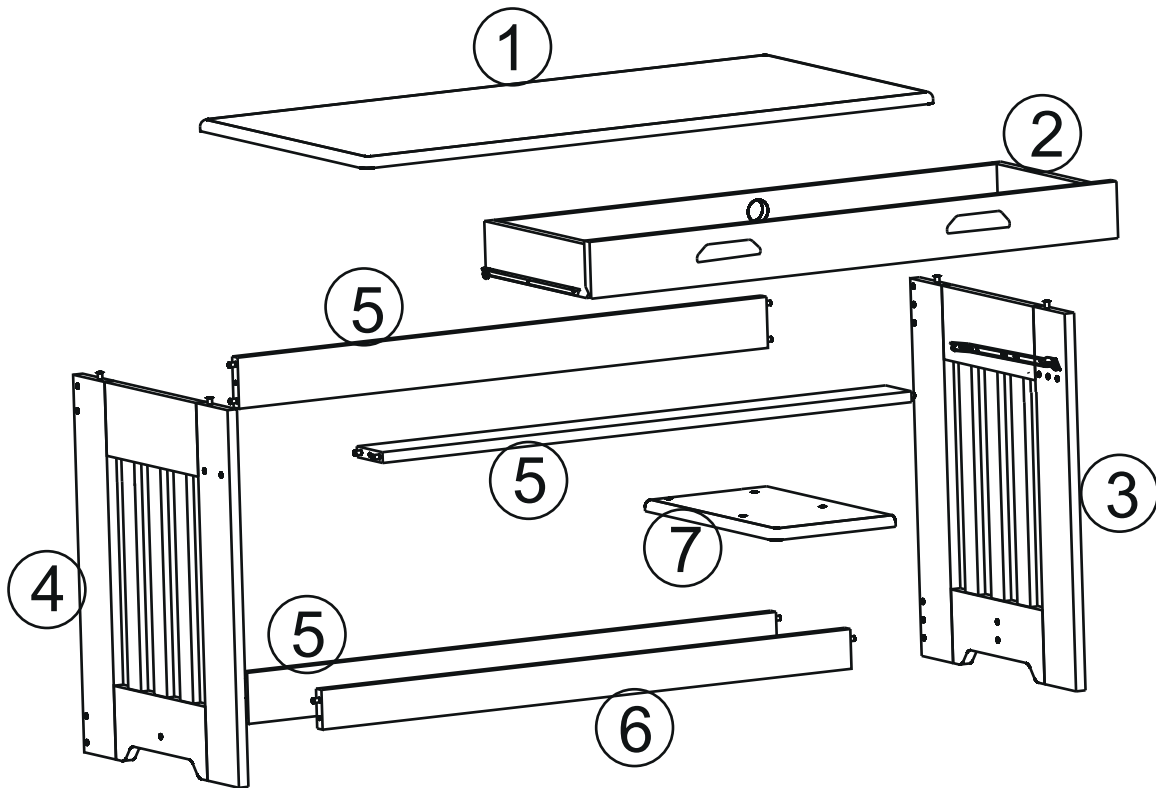2167-2867-0267-2967





A		Bolts	14
B		10 x 30mm Dowel	08
C		Metal Bracket	07
D		Screw 1 1/4"	04
E		Screw 5/8"	14
F		Allen Wrench	01
G		8 x 40 mm Dowel	04


01

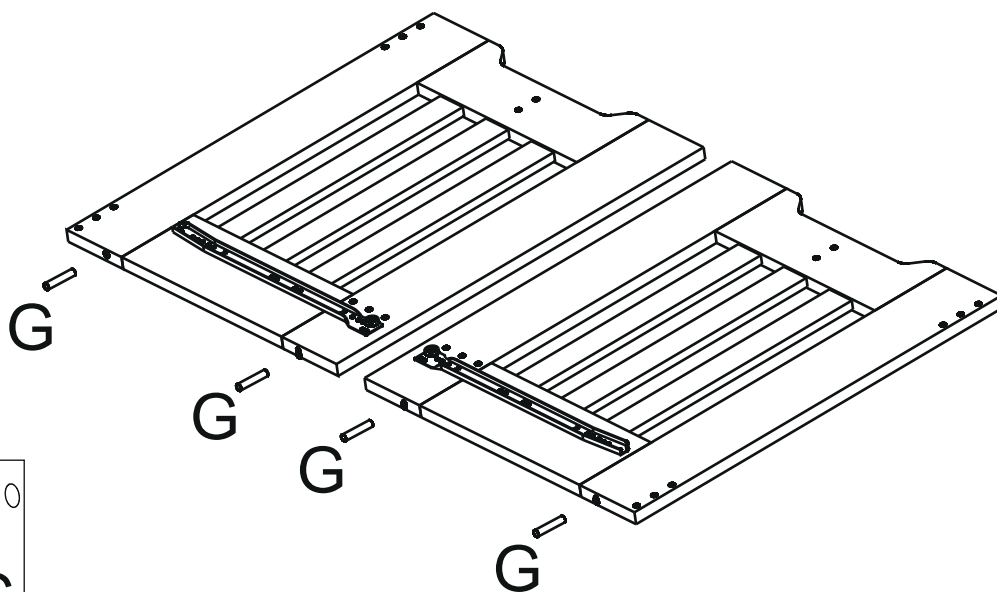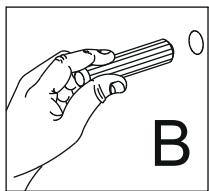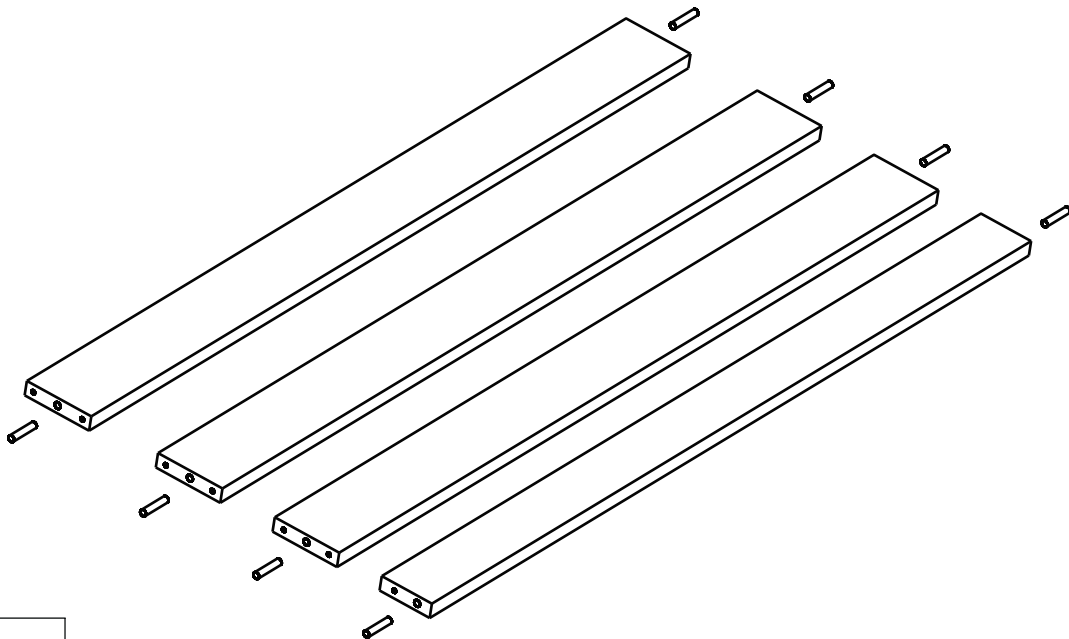


02

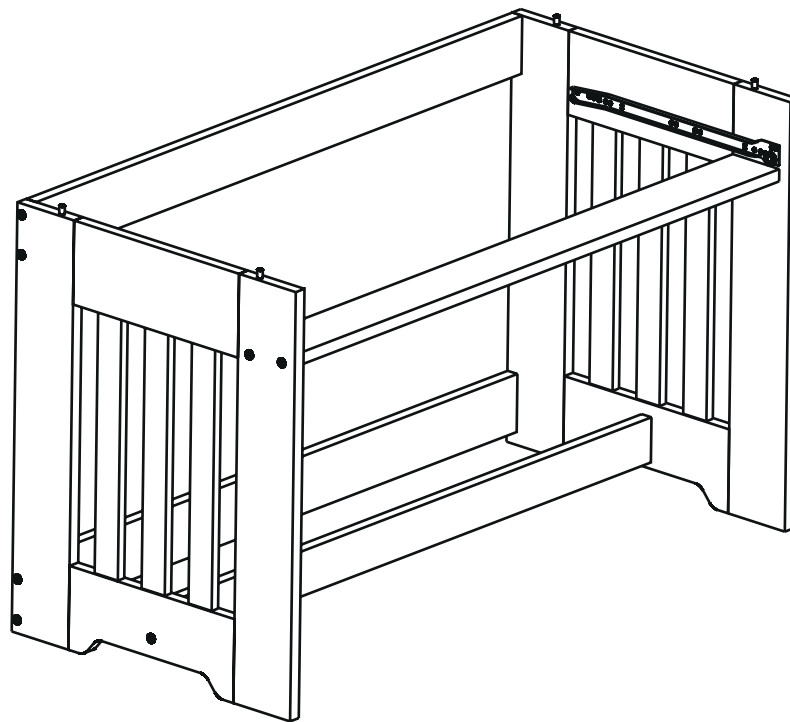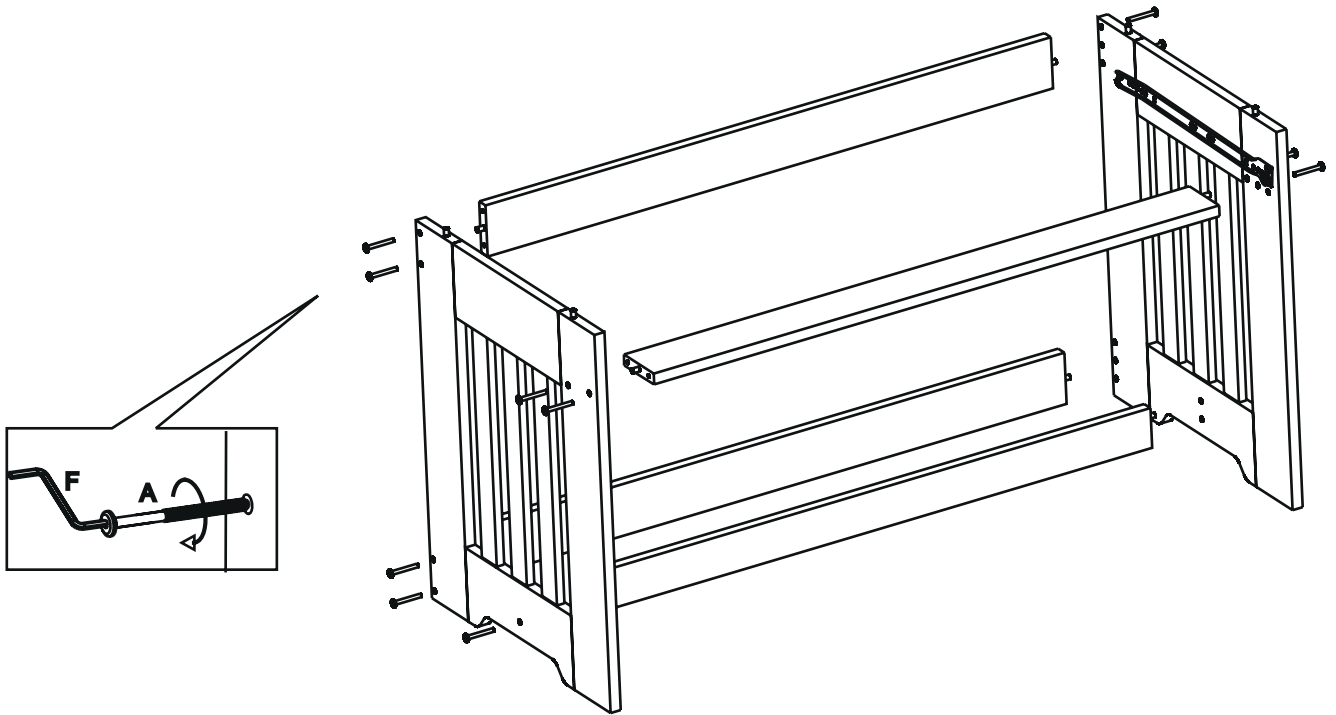


03

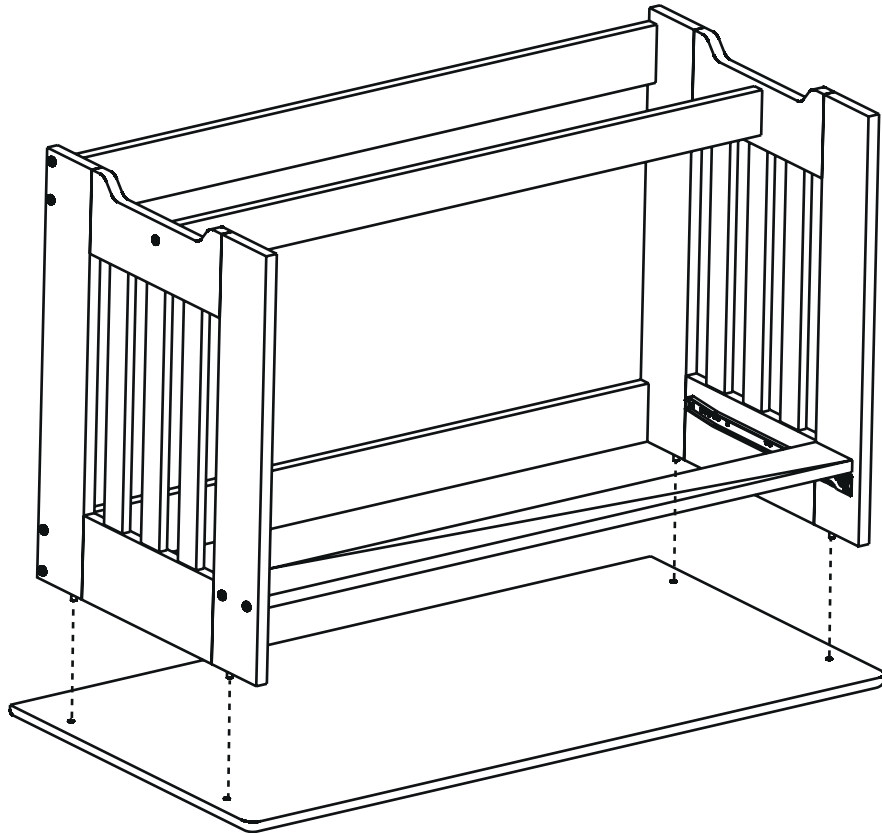


04

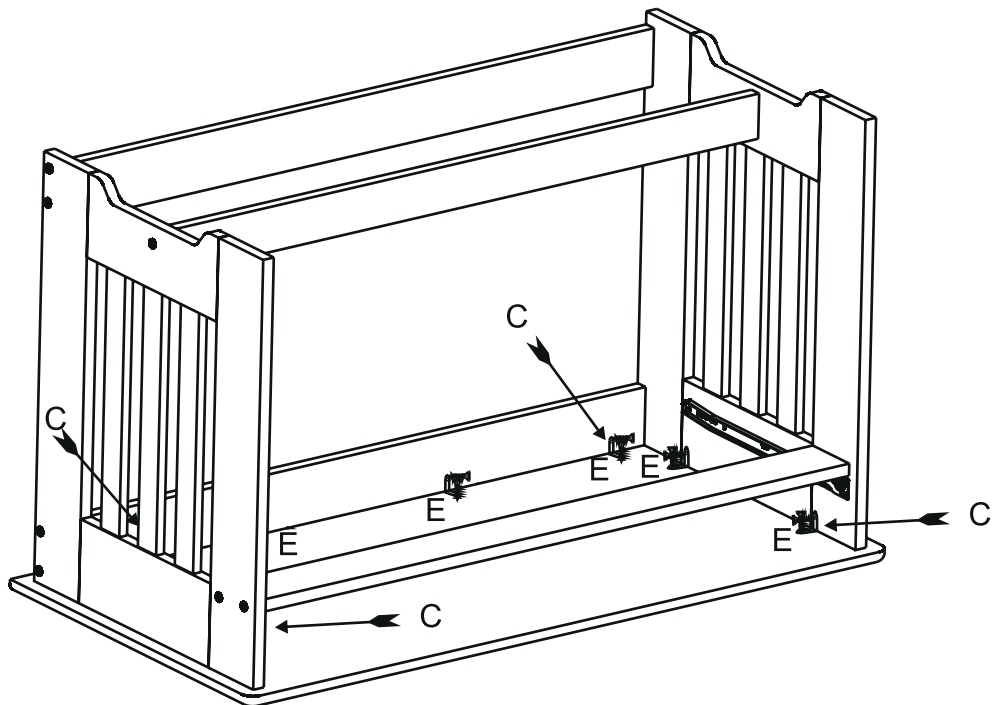

05

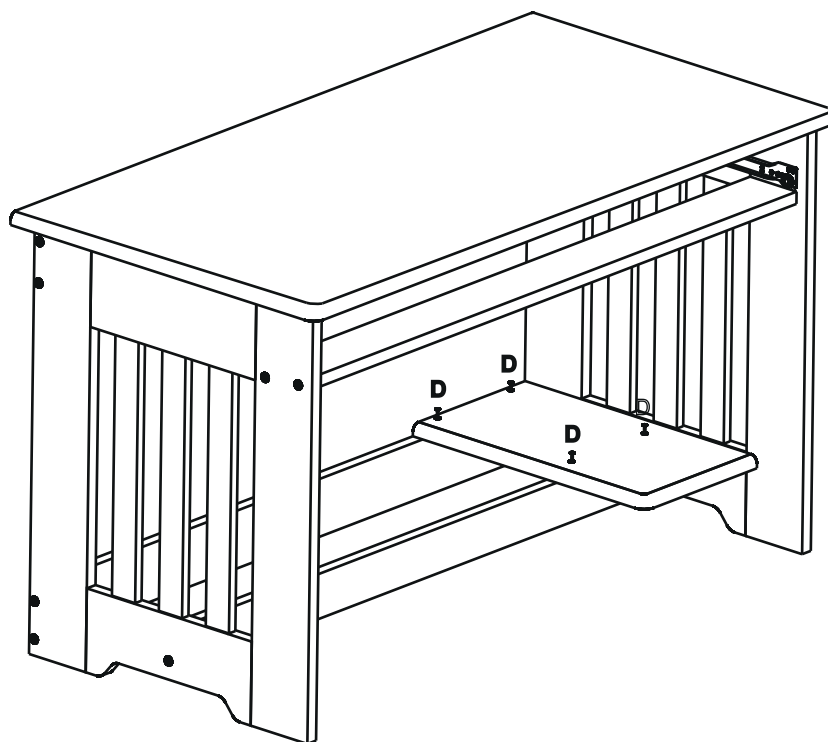

06

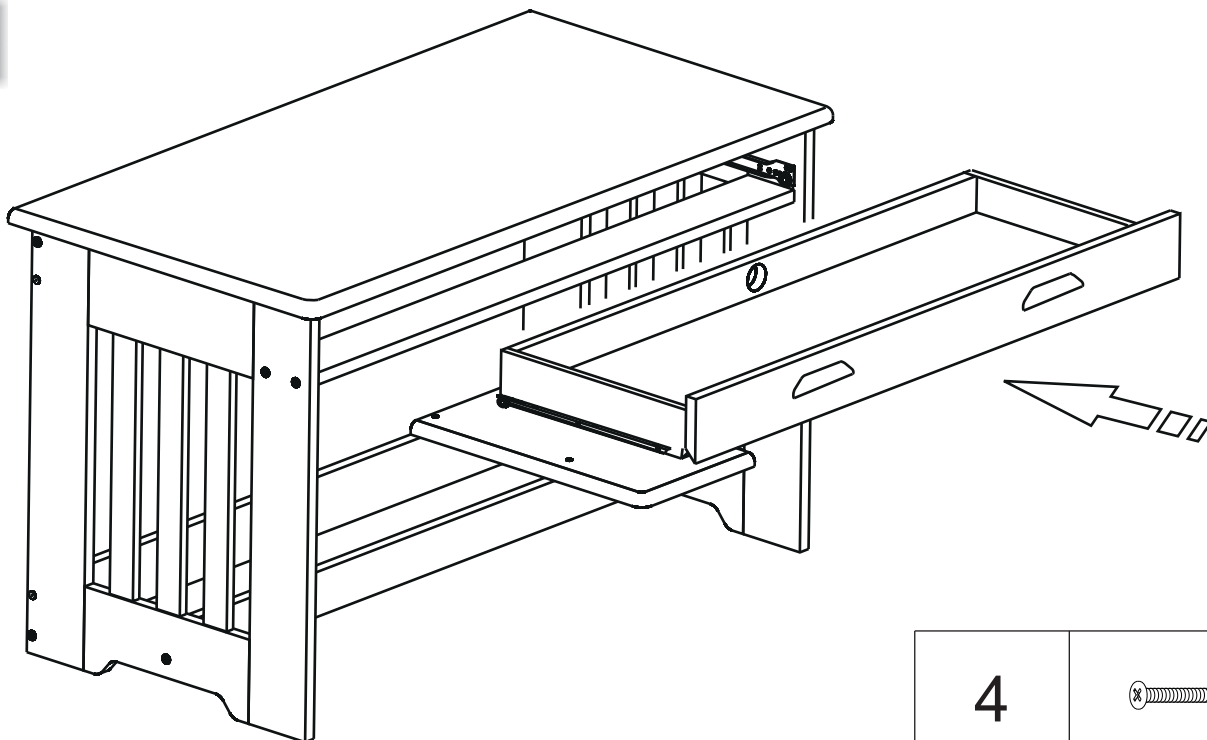

4



2



This step is for 2967 only, install knobs.